


Important! Only work with **PC, Windows**, do not use Aple Mac!
SD card NEVER into a Mac Aple because of this computer system
internal files on the card write what the player can not read and
the film will not run!

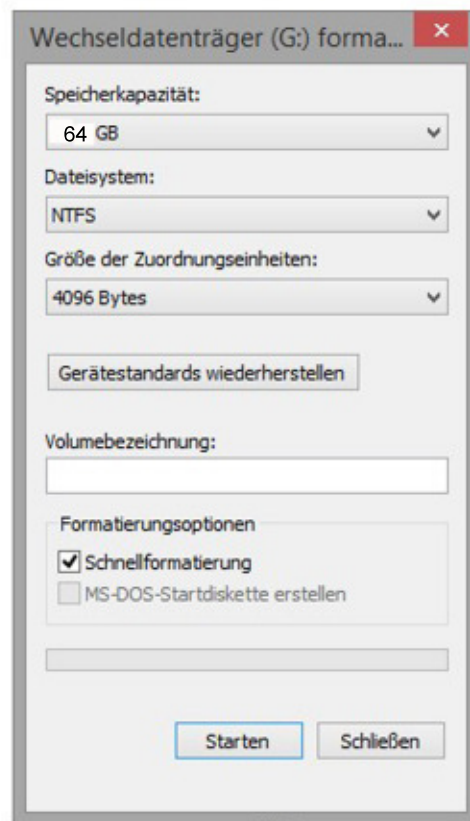


get a good quality (SanDisk) SD card with a minimum of 64 Gigabit
memory.

Format the SD card with **NTFS**.
play ALL files on the card, directly, not in a folder.

4 files:

film1.mp4,
film2.mp4,
film2.mp4,
playlist.txt

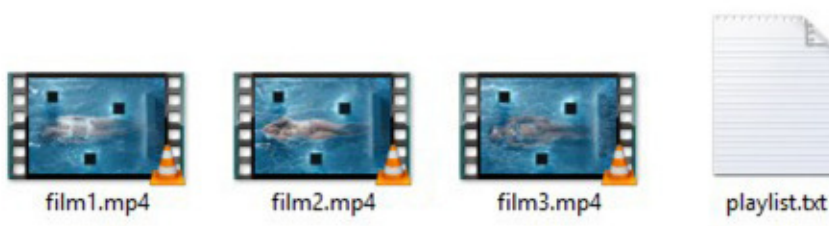

DO NOT change the names.

change the SD card in the player artwork.

Instructions for replacing the SD card



open the back wall:



Task
23/02

stick



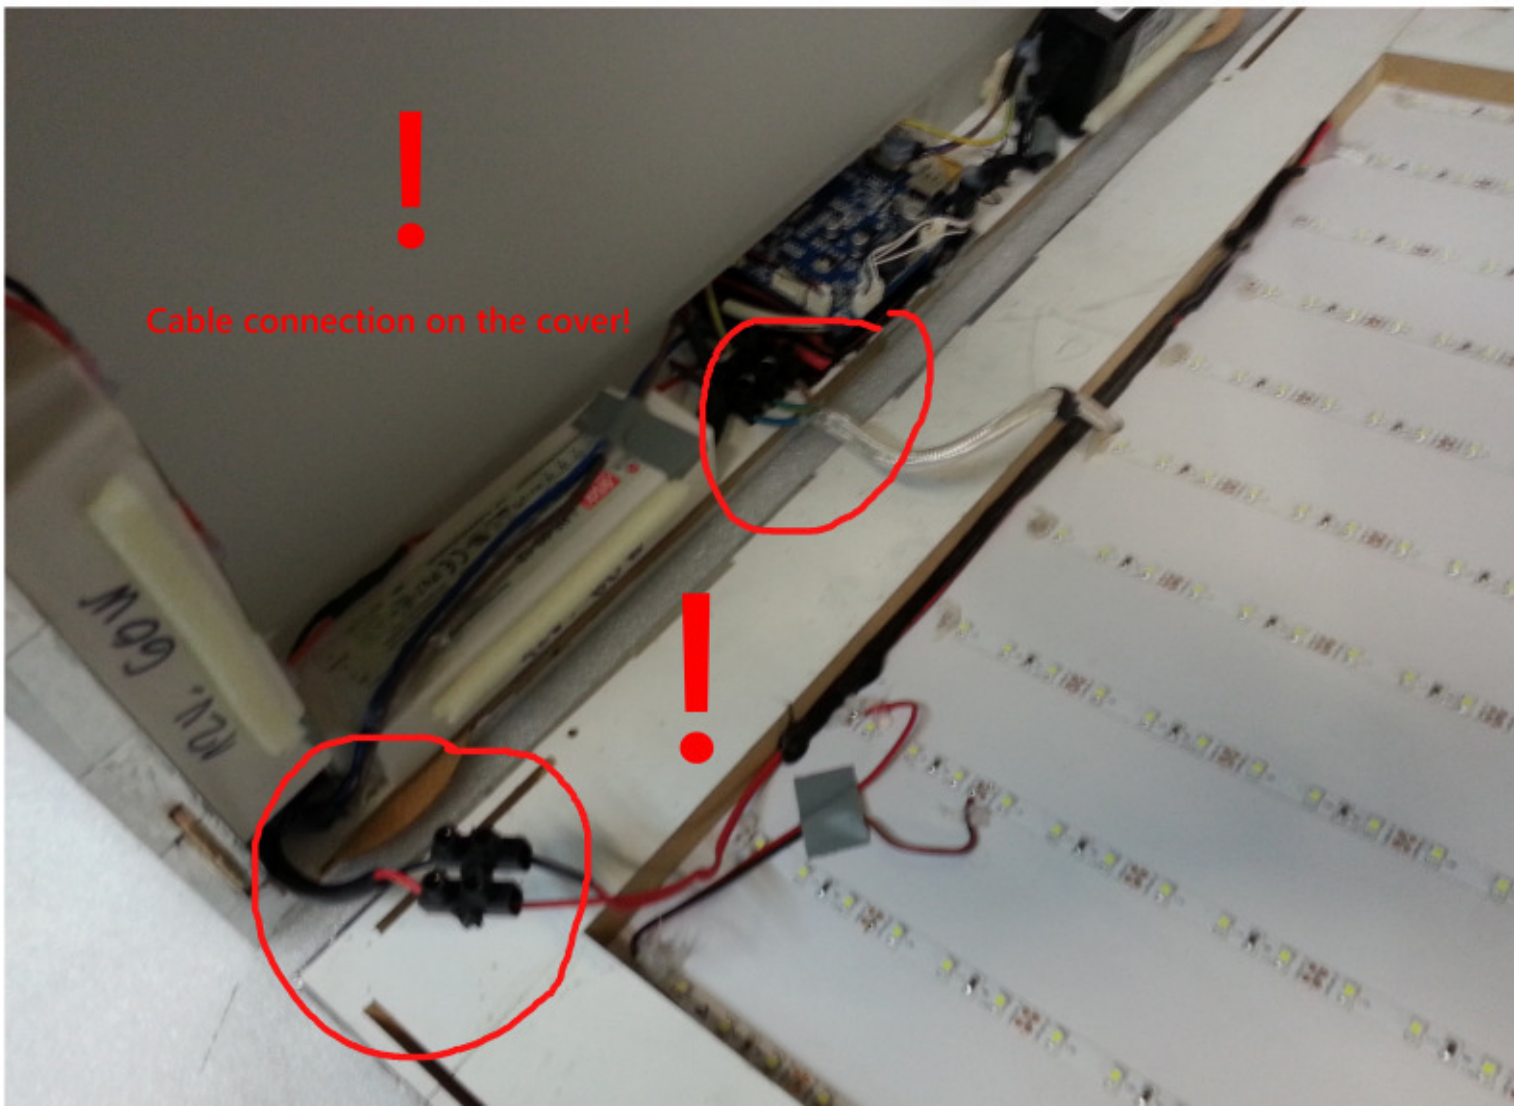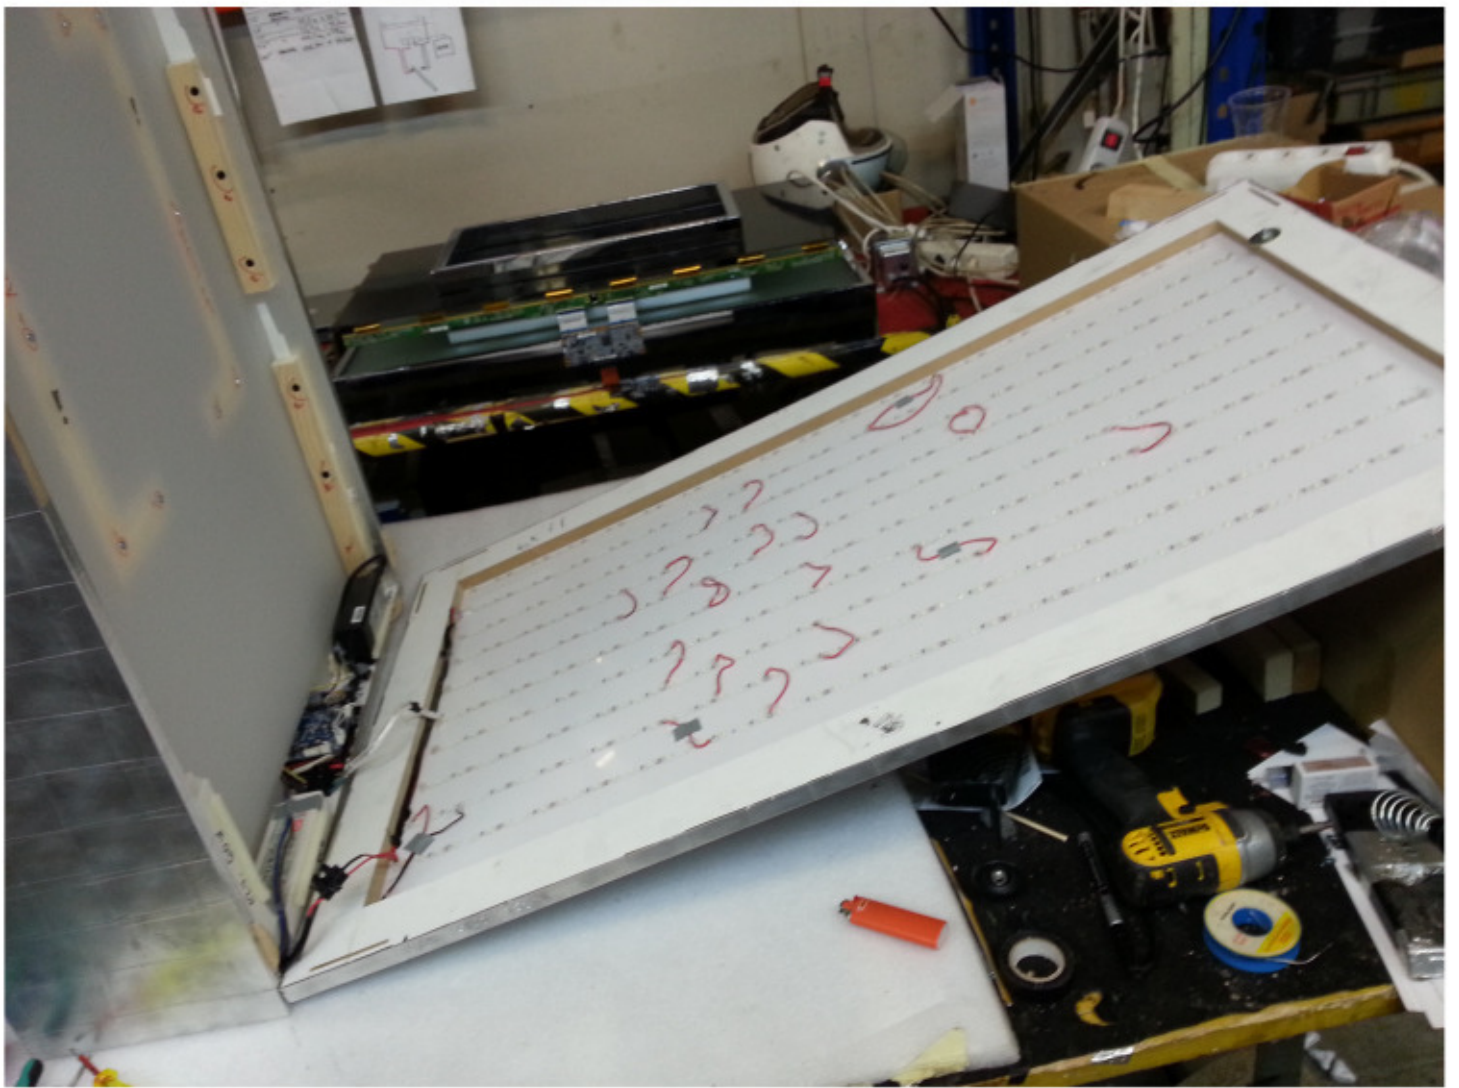

!
 Cable connection on the cover!

